



ACCU-SYNC[®] QR

QUICK RELEASE SCOPE RINGS

- Precision CNC Machined from 6061-T6 Aluminum and Finished in a Matte Black Anodization
- Significant Lightening Cuts Reduce Weight Without Compromising Durability
- Radiused Edges and Corners to Prevent Snagging, Scratching, or Tearing of Other Gear
- Tool-free Tension Adjustable Quick Release Throw Lever Picatinny Base with Squared Recoil Stops
- Made for Civilian Outdoor Sporting Applications



ACCU-SYNC[®] QR

QUICK RELEASE SCOPE RINGS

Caution: Make sure firearm is not loaded. Remove magazine and examine chamber. Use safe handling procedures at all times.

Unlocking the Quick Release Mount

Unlock the quick release mount by simultaneously pressing the lever's spring-loaded locking tab while moving the lever its full 180° of travel. The mount will be unlocked when the lever is pointing completely in the opposite direction from its locked position. When moving the lever, the spring-loaded Picatinny side plate should be seen moving away from the base.



Locking the Quick Release Mount

Lock the quick release mount simply by moving the lever its full 180° of travel. The mount will be locked when the lever is pointing completely in the opposite direction from its unlocked position and once the spring-loaded locking tab reengages the base. An audible click should be heard once the tab is reengaged.



 
Adjusting Mount Tension

ACCU-SYNC® QR Scope Rings and Mounts are tension adjustable and require no tools for making adjustments. A hex key is however provided to make adjustments easier up front.

1. Start with the mount in its unlocked position.
2. Insert the long-end of the hex key into the center of the adjustment gear found on the spring-loaded Picatinny side plate.



3. Press and hold down the Picatinny side plate with your support hand, compressing the springs, and allowing the adjustment gear to clear the locking key and rotate. We find that using the thumb and middle finger to depress the side plate to work well.
4. Rotating the hex key counterclockwise decreases tension and clockwise increases tension.
5. Be sure to return the gear to its keyed position where it sits flush with the Picatinny side plate before manipulating the quick release lever.



Installation on Picatinny Rail

1. Start with the mount in its unlocked position.
2. Rock the mount's base onto the Picatinny rail starting with its fixed side first and with its squared recoil stops aligned with the slots on the Picatinny rail.
3. Proceed to lock the quick release mount. Do not force the quick release lever into its locked position if the tension feels excessive. Adjustments to the tension need to be made.
4. The correct amount of tension is achieved when the mount is securely attached to the Picatinny rail without any movement whatsoever forward, rearward, or side to side when in its locked position.
5. The amount of force required to lock and unlock the quick release lever should not be excessive and or require two hands, but requires deliberate effort.

